

Figure 1.

16

Multi-Client ADSL System


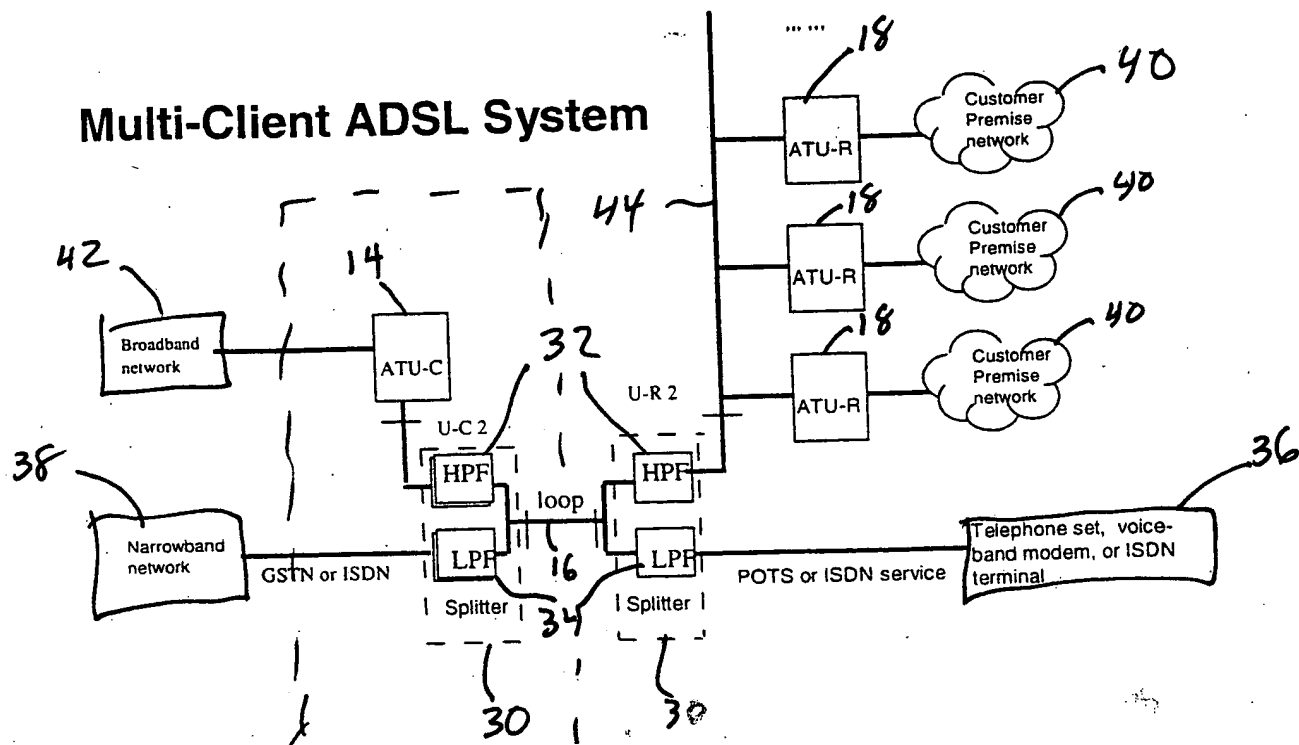


Figure 2.

00551976:083100

Multi-Client Modems share tones

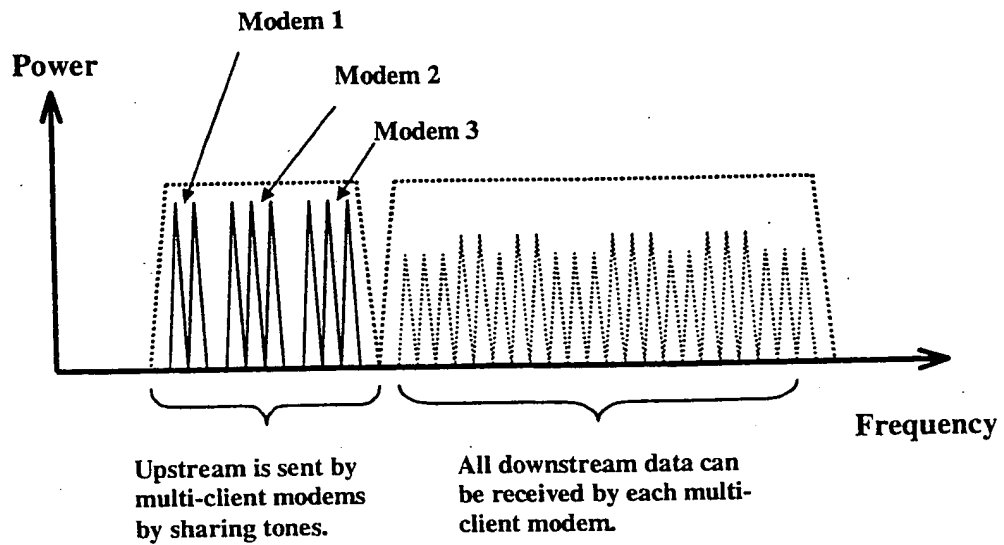

Multi-Client Modems share frames


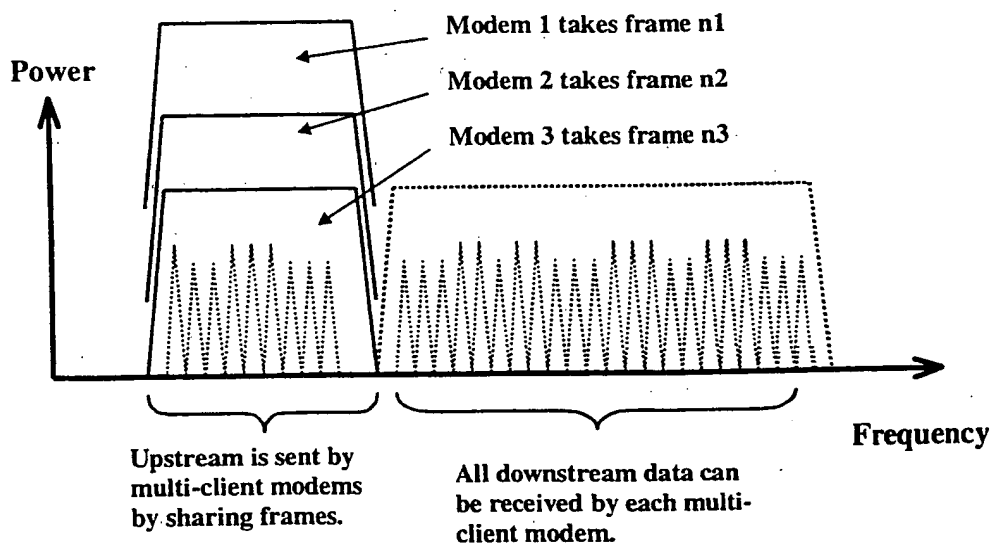


Figure 3.

60)

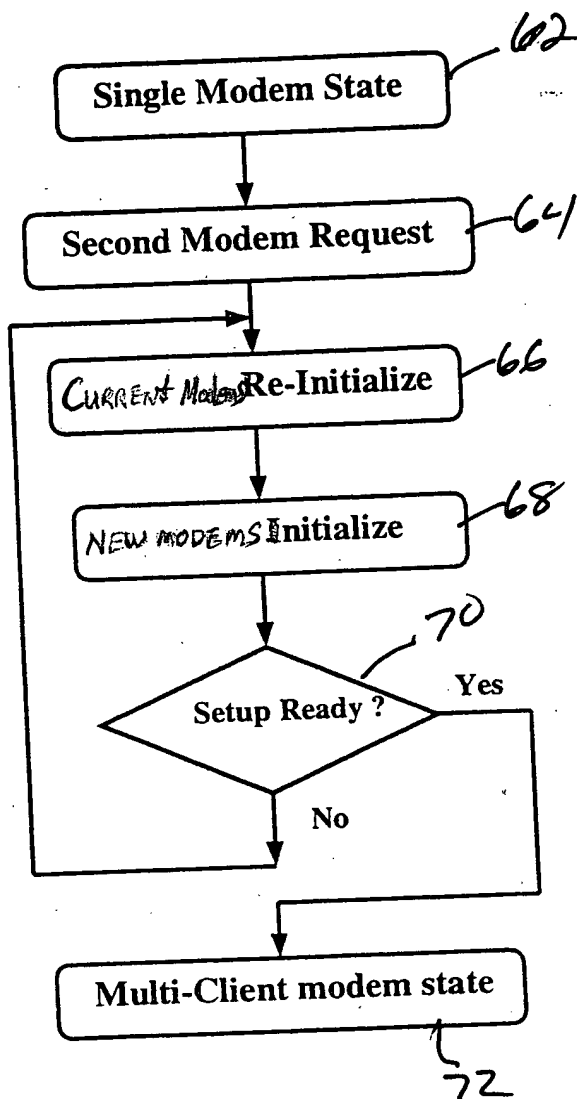

Entering state.

One more modem requests for Multi-Client ADSL operation by signaling CO.

CO modem informs the first RT modem to be the master of Multi-Client operation and drop some frames.

Initialize the second modem to share the dropped frames. Non-master client modem does not generate the sync frame which is by the master client modem only.

Check the setup if ready.

When setup ready, the system enters Multi-Client modem state, one CO modem talks to multiply RT client modem through one pair phone line.

Figure 4.

00651976-03100